 



# VAPOR CLEAN IV

steam cleaner • nettoyeur à vapeur

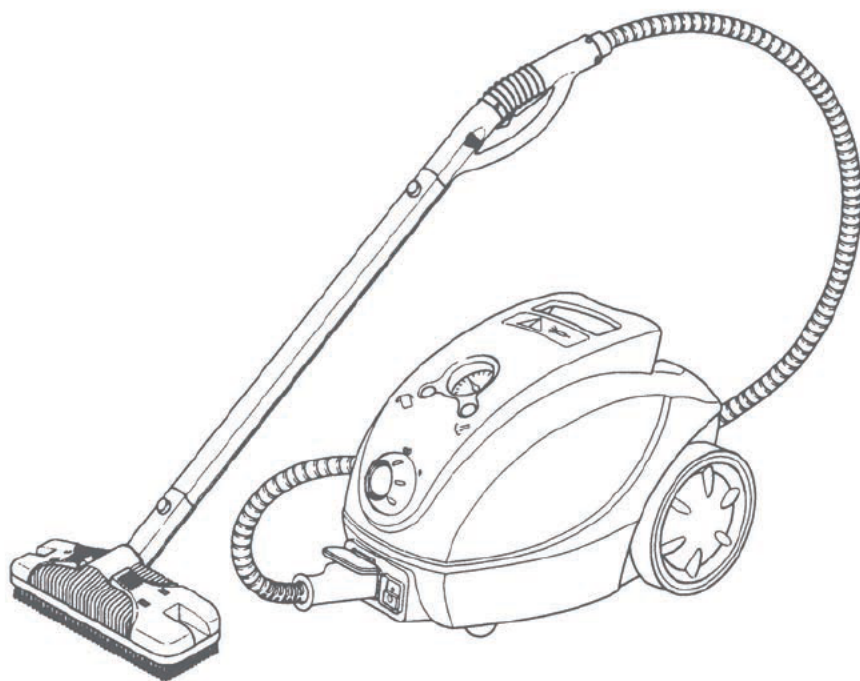

instructions handbook • mode d'emploi
 
## MACHINE DESCRIPTION • DESCRIPTION DE LA MACHINE

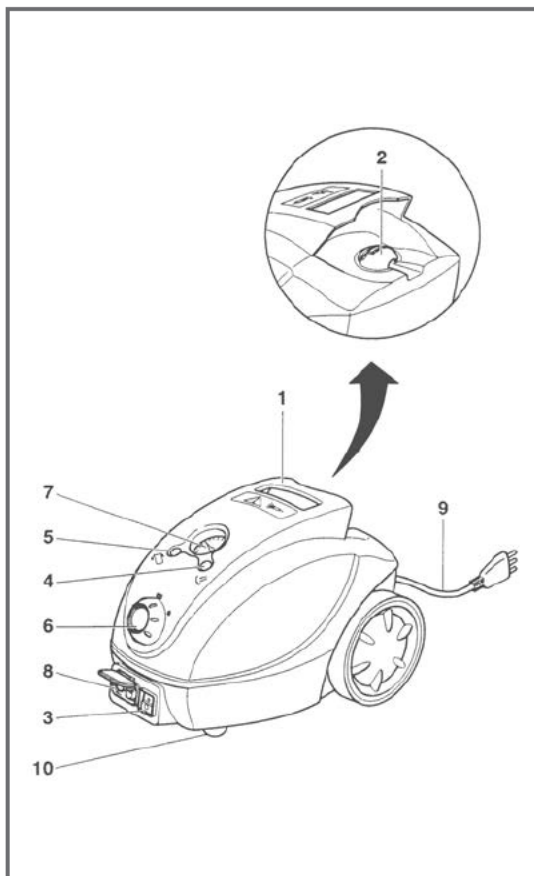


### COMPONENTS

- 1 Handle
- 2 Water tank cap
- 3 Main switch, with anti-splash protection
- 4 Steam ready warning light
- 5 Water shortage warning light
- 6 Steam adjustment knob
- 7 Pressure-gauge indicator
- 8 Steam hose connection
- 9 Electric cable
- 10 Swivel castor wheels

### ELEMENTS

- 1 Poignée
- 2 Bouchon réservoir eau
- 3 Interrupteur général, protégé contre les giclées d'eau
- 4 Voyant lumineux appareil prêt à l'usage
- 5 Voyant lumineux absence d'eau dans le réservoir
- 6 Poignée réglage vapeur
- 7 Manomètre
- 8 Prise tuyau vapeur
- 9 Câble électrique
- 10 Roues pivotantes

## ACCESSOIRES • ACCESSOIRES

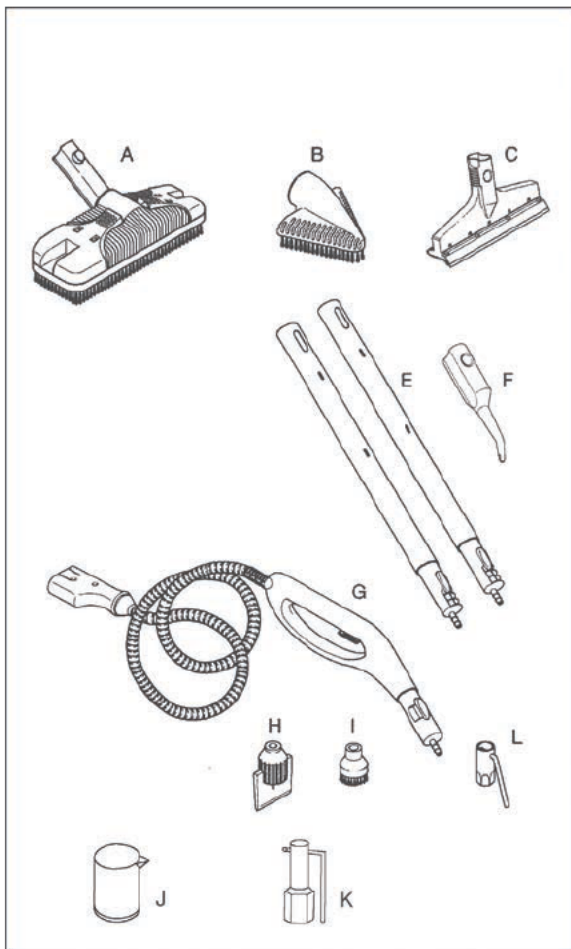

### ACCESSOIRES

- A Rectangular Brush
- B Triangular Brush
- C Glass Wiper
- E 2 Extension Hoses
- F Nozzle
- G Reinforced steam hose, with pistol-grip handle
- H Spatula
- I Small round brush
- J Measuring cup
- K Hexagonal spanner

### ACCESSOIRES

- A Brosse rectangulaire
- B Brosse triangulaire
- C Essuie-vitres
- E 2 tuyaux de rallonge
- F Lance
- G Tuyau vapeur renforcé, avec poignée à pistolet
- H Radoir
- I Petite brosse ronde
- J Distributeur de boisson
- K Clé à six pans male

## CONTENTS

1 TECHNICAL DATA.....	5
2 SAFETY REGULATIONS .....	6
3 INSTRUCTIONS FOR USE.....	7
3.1 STARTING UP .....	7
3.2 USE OF THE ACCESSORIES.....	7
4 MAINTENANCE AND CLEANING .....	8
4.1 AFTER STEAM CLEANING.....	8
4.2 MAINTENANCE AND CLEANING .....	8
5 LEGAL ASPECTS.....	8

---

## INDEX

1 DONNEES TECHNIQUES.....	9
2 INSTRUCTIONS DE SECURITE.....	10
3 MODE D'EMPLOI.....	11
3.1 MISE EN SERVICE .....	11
3.2 EMPLOI DES ACCESSOIRES.....	11
4 ENTRETIEN ET NETTOYAGE .....	12
4.1 APRES LE NETTOYAGE A VAPEUR.....	12
4.2 ENTRETIEN ET NETTOYAGE .....	12
5 ASPECTS JURIDIQUES.....	12

# 1 TECHNICAL DATA

Model	VAPOR CLEAN IV
Rated voltage:	120V/60Hz
Rated power:	1450W
Max power:	1500W
Water tank capacity:	1,6l
Rated pressure:	420 kPa (4,2bar) (61psi)
Weight:	5,1 kg (11 pounds)

## ACCESSORIES

Flexible reinforced steam hose. 3 different brushes – 2 thermoplastic hose extensions – thermoplastic steam duct.

## INFORMATION FOR USERS

According to Directives 2002/95/EC, 2002/96/EC and 2003/108/EC on the reduced use of hazardous substances in electrical and electronic equipment, and their disposal, the barred bin symbol means that at the end of its useful life the product must be disposed of separately from ordinary waste. The user must therefore take such equipment to proper collection centres for electrical and electronic waste, or take it back to the dealer when he buys some equivalent equipment, in the ratio of 1:1.



A suitably differentiated waste collection, followed by recycling, treatment and environmentally friendly disposal helps prevent negative effects on health and the environment and favours the recycling of materials. Any unauthorized equipment disposal by the user will be subject to sanctions as provided for by current local regulations.

## DEAR CUSTOMER,

We compliment you on the excellent choice you have made by purchasing the Vaporetto, the ideal home electrical appliance that will solve any cleaning or sanitizing problem without the use of chemical products or detergents for cleaning, in full respect of the environment. Using steam to clean your home will allow you to quickly rid your house of dirt, mites and bacteria.

We are confident that the use of this appliance will give you every satisfaction.

## 2. SAFETY REGULATIONS

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions and information in this instruction book and any other literature included in the carton referring to this product before operating or using this appliance.
2. Do not touch hot surfaces (i.e. steam wand). Use handles or knobs.
3. To protect against fire, electric shock, and personal injury, do not place cord, plugs, or appliance in water or other liquid.
4. This appliance must be kept out of the reach of children.
5. Unplug from outlet when not in use and before cleaning.
6. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. This machine was designed to process normal household quantities only. Not suitable for continuous operation or commercial use.

12. Do not operate any appliance with a damaged cord or plug, if the appliance malfunctions, or has been damaged in any manner.

Return appliance to an authorized service facility for examination, repair, or adjustment.

13. Do not use if the water tank is not filled.
14. Always use cold water. Warm water or other liquids could cause damage to the appliance.
15. When plugging in the machine, always turn appliance "OFF", attach power cord to the machine first, then plug cord into wall outlet. To disconnect, always turn appliance "OFF", then remove plug from wall outlet.
16. Use extreme caution when using hot steam.
17. Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

### SHORT CORD INSTRUCTION

A short power supply cord is provided to reduce the risk of tripping over or becoming entangled with a longer cord.

The cord should be accessible after installation of the machine in order to disconnect it at any moment if necessary.

Longer extension cords are available at retailers authorized to sell electrical accessories, and may be utilized if care is exercised in their use. If an extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance plug is grounded, the extension cord should be a 3-wire grounded extension cord.
- The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it may be pulled on by children or accidentally tripped over.

## 3 HOW TO USE

The appliance can be used with the relative accessories for cleaning or for ironing.

### 3.1. STARTING UP

**Please note:** this machine detects the minerals in the water to determine there is water in the machine. Distilled water lacks minerals and therefore the machine will call for more water and won't heat.

Our recommendation - Please refrain from using well water, water filtered through water softener systems or hard city tap. Normal city tap water, spring water and bottled drinking water are all recommended water types.

Open the water tank cap and fill the tank with a maximum quantity of 1.6 litres of cold tap water (Fig. 16). Then close the cap.

**Lift the lid 19 and insert the plug of the steam hose fig. 18. Then ensure that the locking pin of the lid 19 clicks in the plug hole.**

Take care that the connections are correctly inserted (Fig. 18). Then simply fit the desired accessory onto the steam gun (Fig. 21).

To remove the accessories press the button on the steam gun (Fig. 22).

Connect the electricity supply cable to the mains socket (Fig. 11).

Switch on the appliance by pressing on the upper part of the switch (Fig. 24); the orange light will come on.

The steam can be used as soon as the steam control light switches on (detail 4 - pag.2) and the pressure gauge shows the pressure value. Press the button on the handle, and then cleaning can begin (Fig. 19). The button must be kept pressed in order to emit steam. To stop the emission of the steam, simply release pressure on the button.

**Caution : during the initial heating up phase, the air inside the boiler always produces a pressure that prevents steam output. Therefore, after the first minute of heating up, press the button on the handle a few times.**

The steam regulator knob controls steam hose output (C, fig. 20). Turn the knob left for higher pressure, wetter steam. Turn the knob right for lower pressure, drier steam. NOTE: Steam output will diminish faster at high pressure settings. Mid to low pressure is best to maintain steam quality.

If the warning light comes on (detail 5 - pag.2) and the buzzer is heard, this means that there is no longer enough water in the tank. Open slowly the tank cap and fill it up with cold tap water.

### 3.2. USING THE ACCESSORIES

All the accessories can be fitted directly onto the handle or onto the extension tubes.

**Caution : check that the surfaces and the fabrics that you wish to steam clean are suitable for this type of treatment before starting to clean them.**


Accessory for floors, with or without the cloth, for cleaning all smooth floor surfaces and to freshen up carpets (Fig. 23).

**Caution : in the case of delicate surfaces always use the cloth.**

Triangular accessory with cloth for cleaning padding, mattresses, kitchen furniture and to freshen up garments.

Glass wiper for cleaning windows, mirrors, shower walls, etc.

**Caution: when cleaning cold glass surfaces always keep at a distance of at least 50 cm and work only with the minimum quantity of steam. (The non-observance of this precaution can cause the glass to breaking.)**

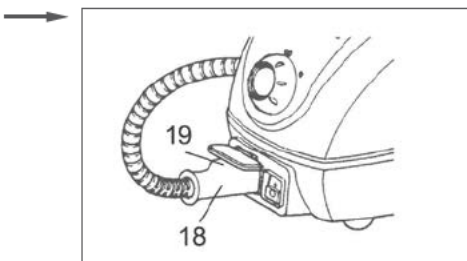

Nozzle and steam output with or without circular brush and spatula for cleaning points that are difficult to reach such as washbasins, toilet bowls and surfaces in very narrow areas.

**Caution : do not use the circular brush and/or spatula on delicate surfaces.**

Spatula for cleaning ovens, grills, barbecues, fireplaces and such like.

When cleaning delicate objects (plants) always keep at a distance of 20-40 cm and avoid direct contact with the steam (Fig. 26).

## 4 MAINTENANCE AND CLEANING

### 4.1 AFTER STEAM CLEANING

When you have finished cleaning with your steam cleaner, switch off the appliance and leave it to cool completely before putting it away.

### 4.2 MAINTENANCE AND CLEANING














The water filter must be periodically cleaned, remove it from the opening where the water is poured in. When carrying out maintenance operations, the appliance must not be plugged into the electricity supply. Routine checks carried out by an authorised Servicing Centre will increase the life and the reliability of your appliance. Keep the original carton in which your appliance was packed to protect it during transport.












## 5 LEGAL ASPECTS

This instruction booklet contains the information necessary for correct use, proper handling and careful maintenance of the appliance. Knowledge of and compliance with the instructions are the necessary requirements for efficient functioning and maintenance of the appliance in complete safety. However, these instructions cannot cover every possible and imaginable use of the appliance. Should you need further information or should any particular problem arise that, in your opinion, is not clearly explained herein, please call your local retailer or contact the manufacturer. All obligations of our company are governed by the relevant sale contract, which also includes the complete and exclusive regulation and provision of guarantee. Contractual guarantee provisions are neither limited, nor extended by these instructions.

The information given in these instructions is protected by copyright. These instructions may not be photocopied or translated into other languages without the prior written permission of the manufacturer.



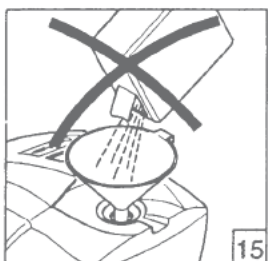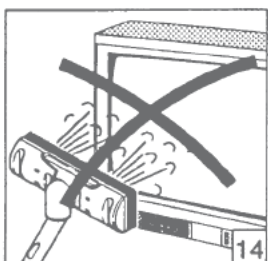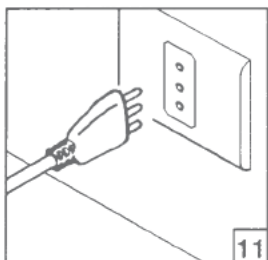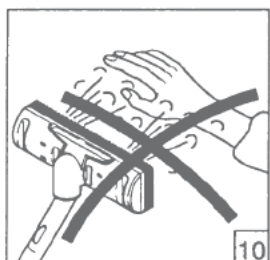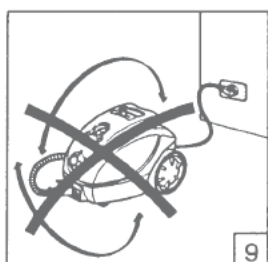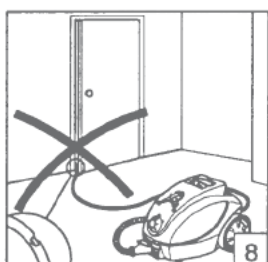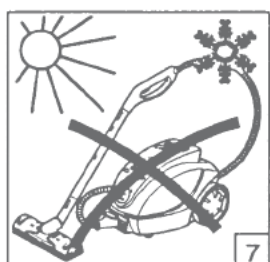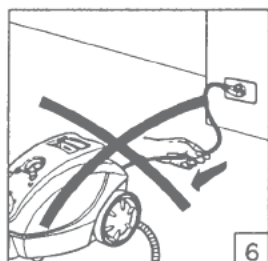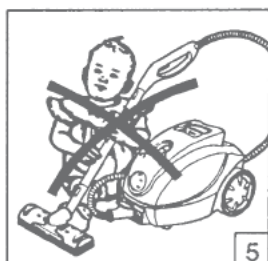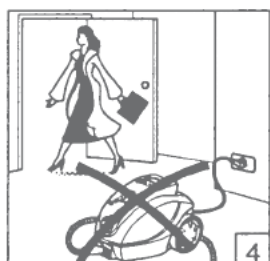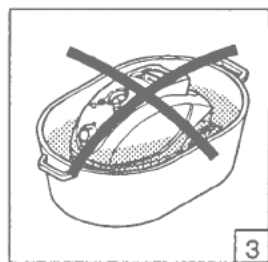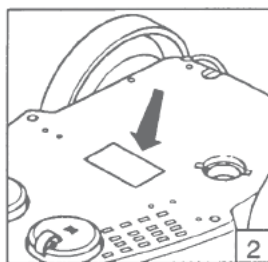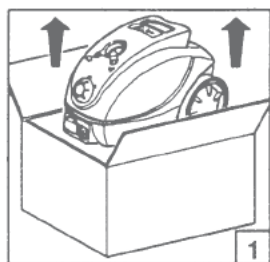

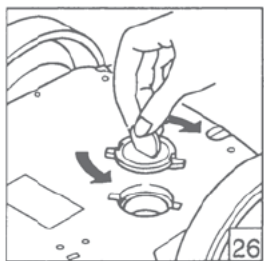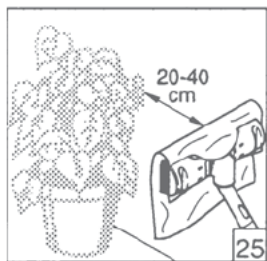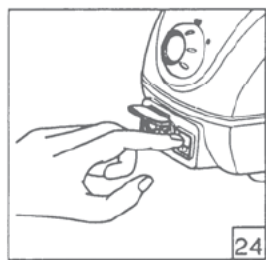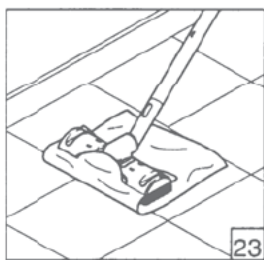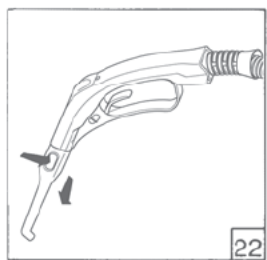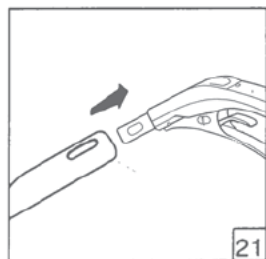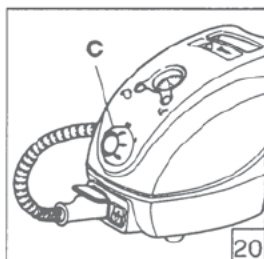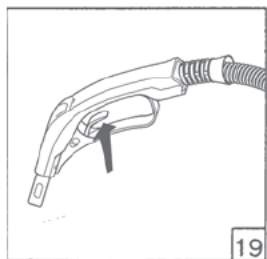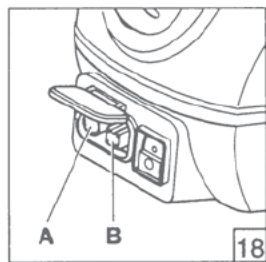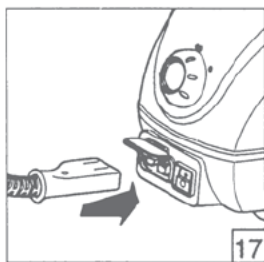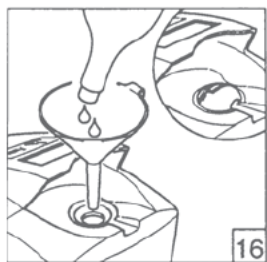

#### CONTACTS

*phone number:* 1-800-758-3141

*website:* [www.MyVaporClean.com](http://www.MyVaporClean.com)